


MODEL CDR-1000 CD-ROM DRIVE
SHEET # 1 (250-1077)
FAXBACK DOC # 10345

CONTINUED ON
SHEET # 2

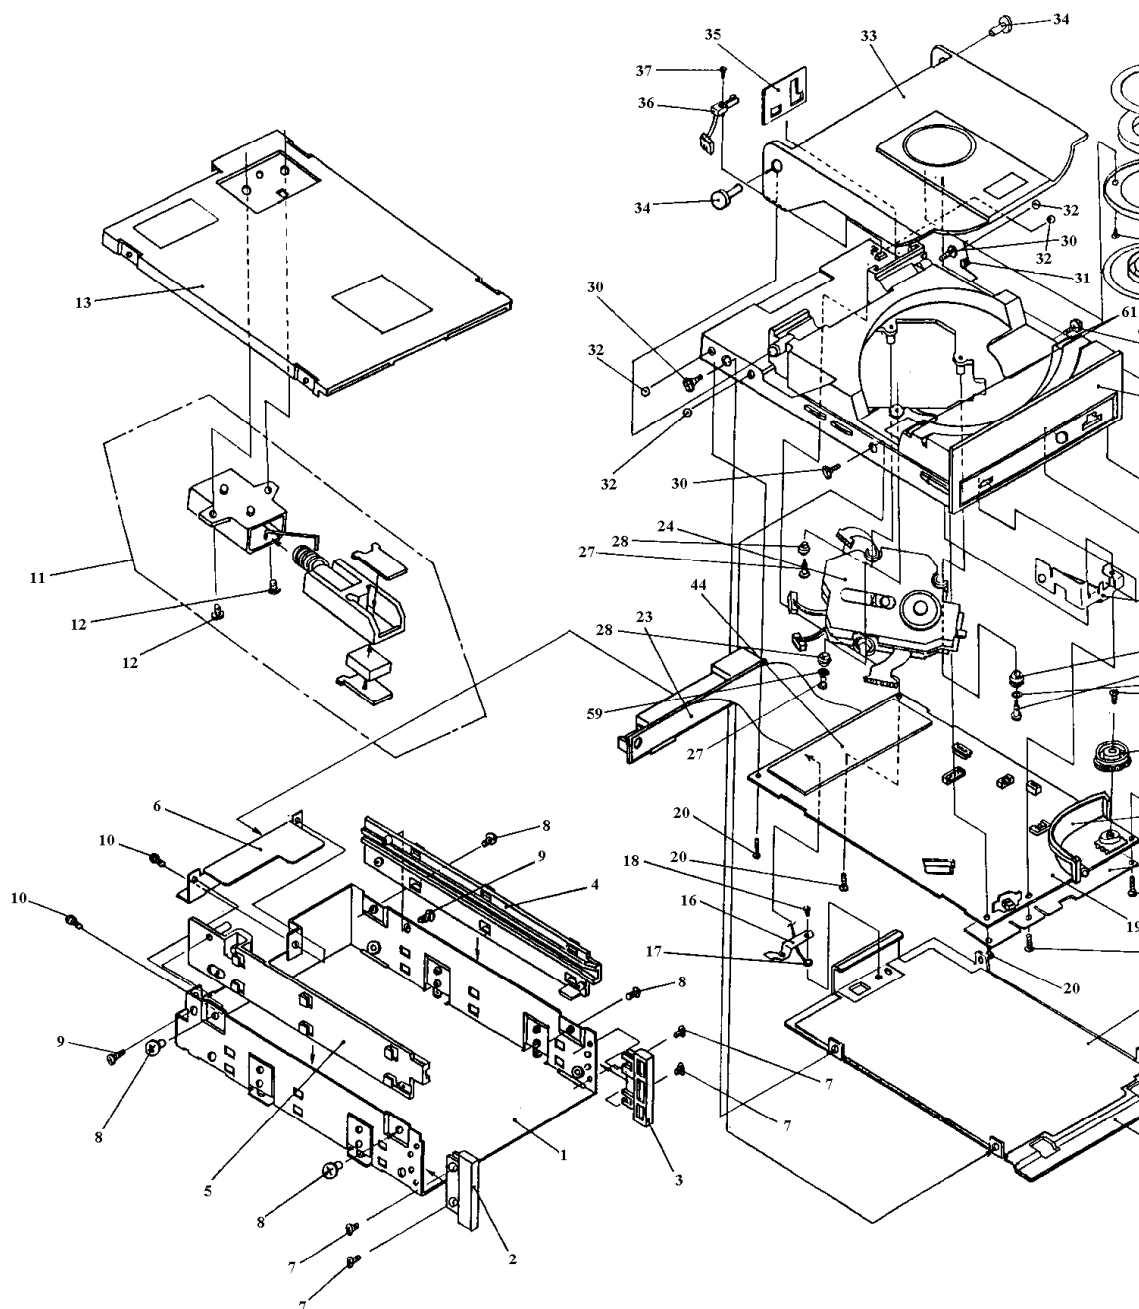

MODEL CDR-1000 CD-ROM DRIVE
SHEET # 1 (250-1077)
FAXBACK DOC # 10345

CONTINUED ON
SHEET # 1

